



APP Engineering Sdn Bhd

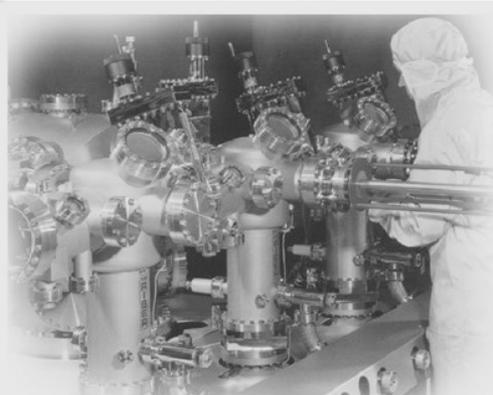

Foamtec Demonstration

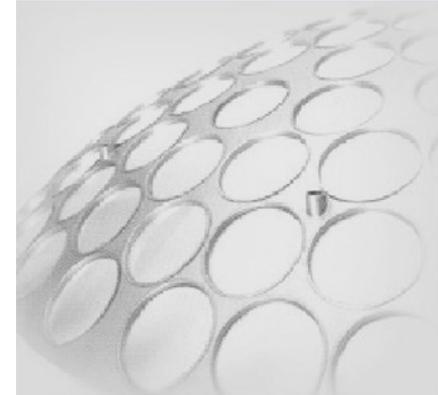

Objectives



To remove the nickel coating on stainless steel block and roller using Foamtec products.





Cleaning products



**360 grit diamond scrubpad
HT-4536D**

**800 grit diamond scrubpad
HT4580D**

**Ultrasolv Sponge
HT4754**

**ScrubBELT
HT4580DW**

**Mirawipe Wiper
HT5790S**

DI water & Gloves





Comparison Before and After cleaning with Foamtec Products



Before cleaning



After cleaning





Comparison Before and After cleaning with Foamtec Products



Before cleaning



After cleaning





Cleaning procedures

Moisten the scrubpad and sponge with DI water either spray or place in a container






Take lightly dampened UltraSOLV[®] Sponge and wipe area of the surface that is to be cleaned in order to remove flaking deposition from surface





Take lightly dampened 360 Grit Diamond ScrubPAD and scrub a small area of the process chamber

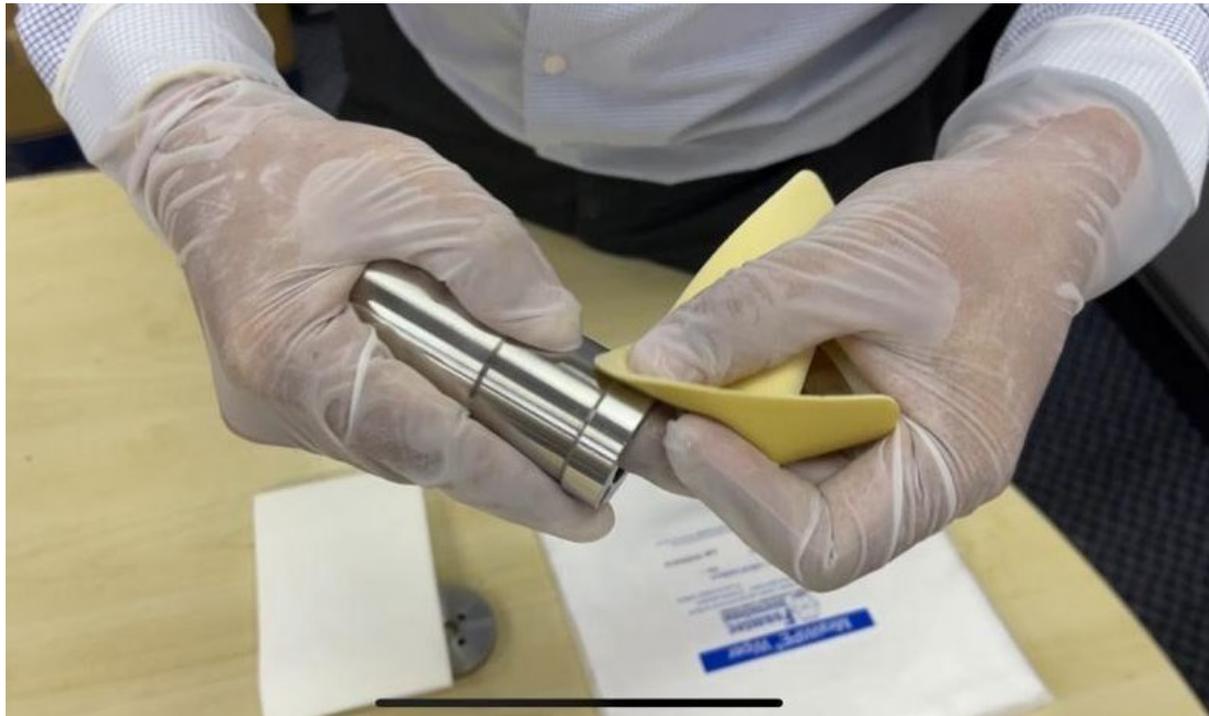

After scrubbing a small area with the 360 Grit Diamond ScrubPAD, take the lightly dampened UltraSOLV[®] Sponge and wipe deposition from the scrubbed area



Scrub with 800 grit diamond scrubpad on fine surface






Scrubpen is used to clean small and hard to reach area





As Diamond ScrubPAD loads-up with deposition, pull ScrubPAD across damp UltraSOLV® Sponge to properly unload

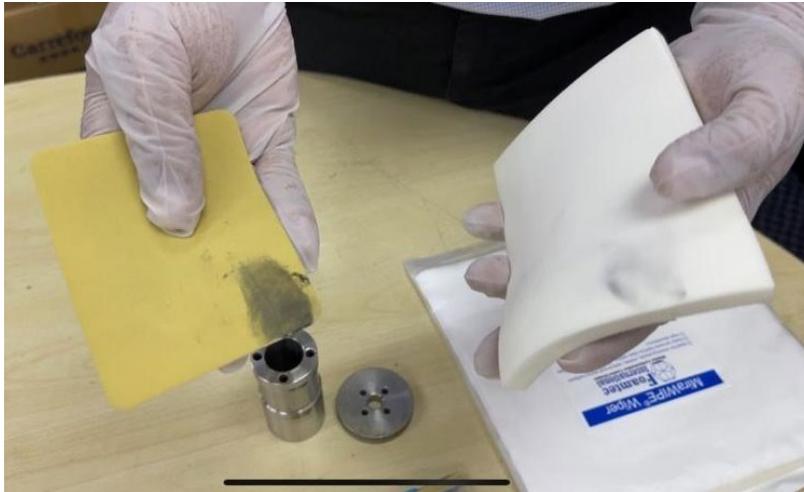




As UltraSOLV® Sponge becomes loaded with deposition, rinse in container of DI water

For final wiping, the technician should use mirawipe with demped IPA to clean the surface of the item.





Scrubpad and sponge after use and rinse with DI water

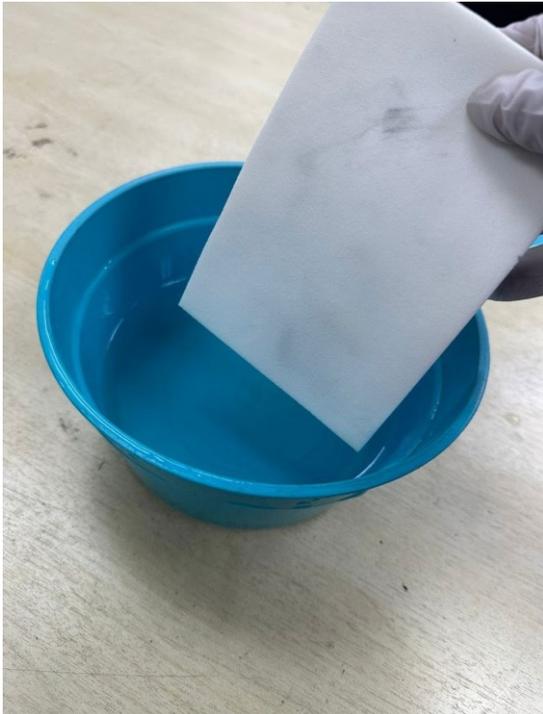

Continue or keep for the next cleaning process.



Visit us at



Malaysia Branch Contact

Torico Sdn Bhd



Office Email: salesmy@torico-ltd-co.jp
Shopee: www.shopee.com.my/torico.my
Online shop: www.toricomall.com
Website: www.torico-ltd.co.jp

